

AERATRON


Aeratron Wall Switch Control Instruction




IMPORTANT - The Wall Switch must be installed by a licensed and qualified electrician. 5 Gang Wall Switch components are not supplied by Aeratron

5 Gang Wall Switch

ON/OFF > FWD/REV SWITCH
TYPE: ON/OFF SWITCH

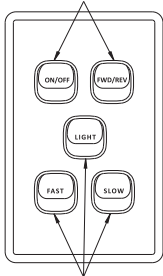

SPEED > LIGHT/ MOMENTARY ACTION SWITCH
Type: BELL PRESS PUSH-BUTTON SWITCH

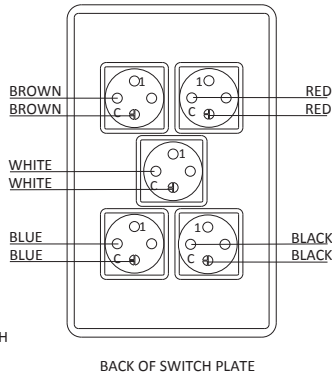



Connect to Switch



Not Supplied by Aeratron

SWITCH CABLE SPECIFICATION:
TPS Mains rated cable / Twin active
1mm² = 250m max. Cable length
1.5mm² = 375m max. Cable length



First Fan (Signal Master)

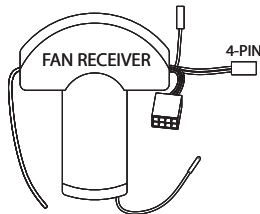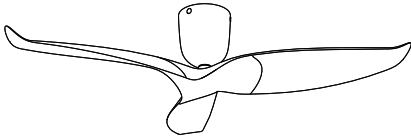

TO





Second Fan (Signal Slave)

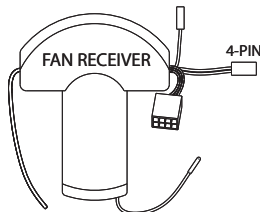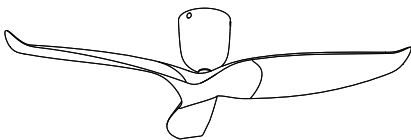

TO




Additional Fan / max.8 Fans in total

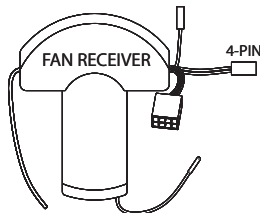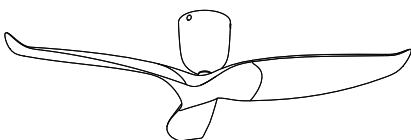

TO



Controlling the Fan

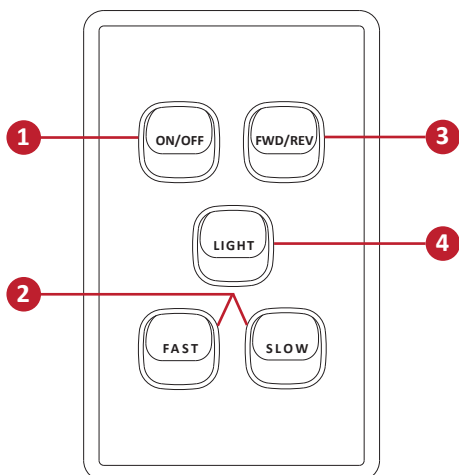

1. Fan ON/OFF
2. Speed Up/Down - 1-6 Speed
3. Forward/Reverse
Use forward mode (clockwise) for cooling.
Use reverse mode (anti-clockwise) to circulate warm air.
4. Light On/Off
To DIM, press and HOLD light button to cycle from bright to dark.

Audible Speed Indication

| | |
|----------------|----------------|
| 🔊) short beeps | 🔊)) long beeps |
| SPEED 1 — | SPEED 4 — |
| SPEED 2 — — | SPEED 5 — — |
| SPEED 3 — — — | SPEED 6 — — — |

For General Information & Warranty issues refer to the Aeratron™ User Manual available at www.aeratron.io

Thank you. Your Aeratron team.

AERATRON

Wall Switch Control Edition 2021/08